



Einhell

EXPERT

POWER X-CHANGE

Cordless Chain Saw

GE-LC 18/25-1 Li Kit
(1x3,0Ah)

Item No.: 4501760

Bar Code: 4006825608335

The Einhell cordless GE-LC 18/25-1 Li Chainsaw Kit combines the outstanding performance of an Einhell product with a high-quality OREGON guide bar and chain. Kickback protection with an instant-reaction mechanical chain brake and a stop claw keep you safe while you are working with the chainsaw. The rugged metal stop claw keeps the saw stable while you are working, and the ergonomic handle gives you a comfortable grip on the chainsaw. No tools are needed to adjust the chain tension or replace the chain. A big filler opening of the automatic chain lubrication system makes it easy to top it up if necessary. The set includes a fast charger and battery which can be used for all Power X-Change family products.

Features & Benefits

- Battery system - Power X-Change
- Battery charge level indicator with 3 LEDs
- Battery can be used for other Power X-Change products
- System high-speed charger included
- High-quality chain and bar from OREGON
- Toolless chain tensioning and changing
- Ergonomic handle
- Sturdy stop claws made of metal
- Kickback protection with mechanical instant chain brake
- Big filler opening
- Automatic chain lubrication
- Chain catch bolt



Technical Data

- Sword length 250 mm
- Max. cutting length 23 cm
- Chain cutting speed 4.5 m/s
- Oil tank capacity 200 mL



Logistic Data

- Product weight (kg) 2.97 kg
- Gross weight (kg) 4.97 kg
- Dimensions single packaging 225 x 480 x 245 mm



Available as special accessories



Spare Bar 25cm 1,1
Chain Saw Accessory
Item No.: 4501753
Bar Code: 4006825607017
Einhell Accessory



Spare Chain 25 cm 1,1 40T 3/8
Chain Saw Accessory
Item No.: 4501754
Bar Code: 4006825607024
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times

One Battery for All	 sawing ¹ (pieces)
1.5 Ah	50
2.0 Ah	70
2.5 Ah	85
3.0 Ah	100
4.0 Ah	130
5.2 Ah	180
6.0 Ah	200
8.0 Ah	260

For best performance select a battery with at least 2.5 Ah

Test setup:

1) wood - scantling 70x70 mm